




Installing MCS-SI-EXT to MCS-SI-BASE




POWER MUST BE OFF PRIOR TO INSTALLING EXTENSION BOARD

Package contains:

MCS-SI-EXT

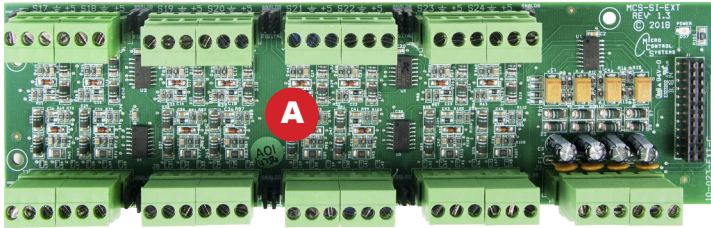

CONNECTING PIN - 1 per package

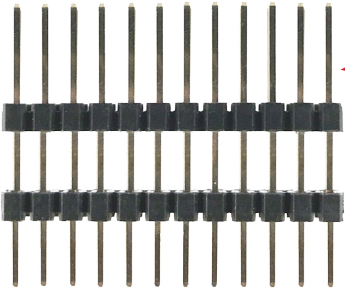

B Long End of Pins insert into SI EXT Board


Short End of Pins insert into the SI BASE



1" Female/Female Hex NUTS - 4 per package


MCS-SI-BASE (sold separately)

Used for mounting the MCS-SI-EXT(A) onto.

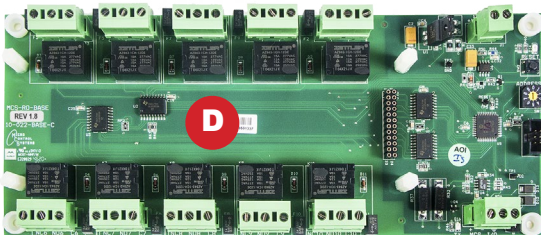


Step 1. INSERT CONNECTING PINS (B)

Insert 'LONG END' of connecting pins (B) into the back of the MCS-SI-EXT board (A), press all the way in until pins are fully seated, they should stay in place when you turn the EXT board over.

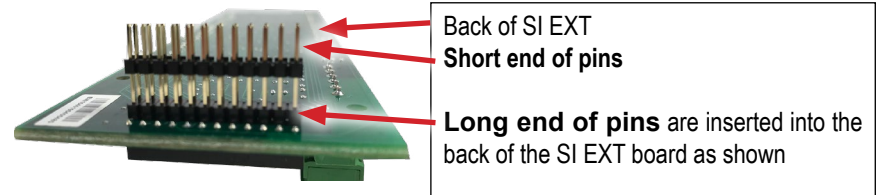


Step 2. MOUNTING MCS-RO-EXT

Place MCS-SI-EXT(A) on top of the MCS-SI-BASE(D), align 4 screw posts (RED ARROWS), look at position of connecting pin on open side, press MCS-SI-EXT(A) short pins into the MCS-SI-BASE(D).

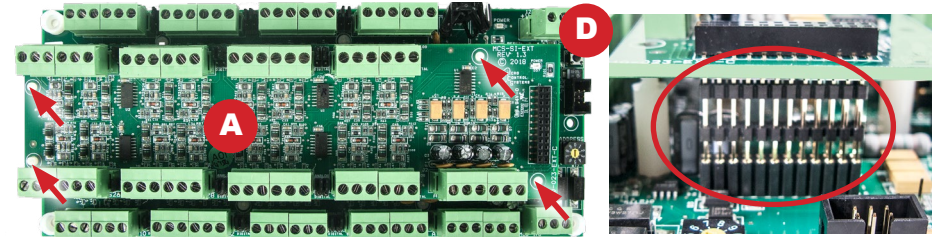

Step 3. ATTACH HEX NUTS (C)

Screw the HEX NUTS (C) onto the existing standoffs to secure the MCS-SI-EXT(A) to the MCS-SI-BASE(D).

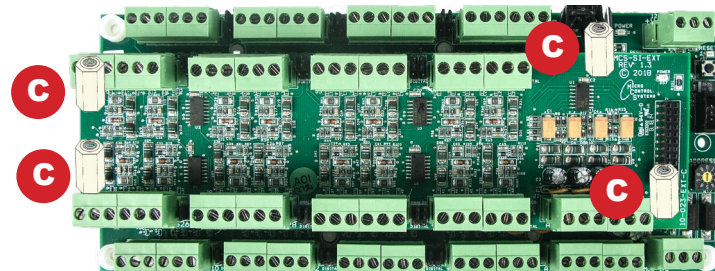

Step 4. ADDRESSING:

The address for the MCS-SI-EXT(A) will be the address of the MCS-SI BASE (D) + 1. (e.g., MCS-SI-BASE set to #3 will assign address #4 to MCS-SI-EXT).

