




# MCS-NITROMAG-15.4 CUSTOMER INSTALLATION

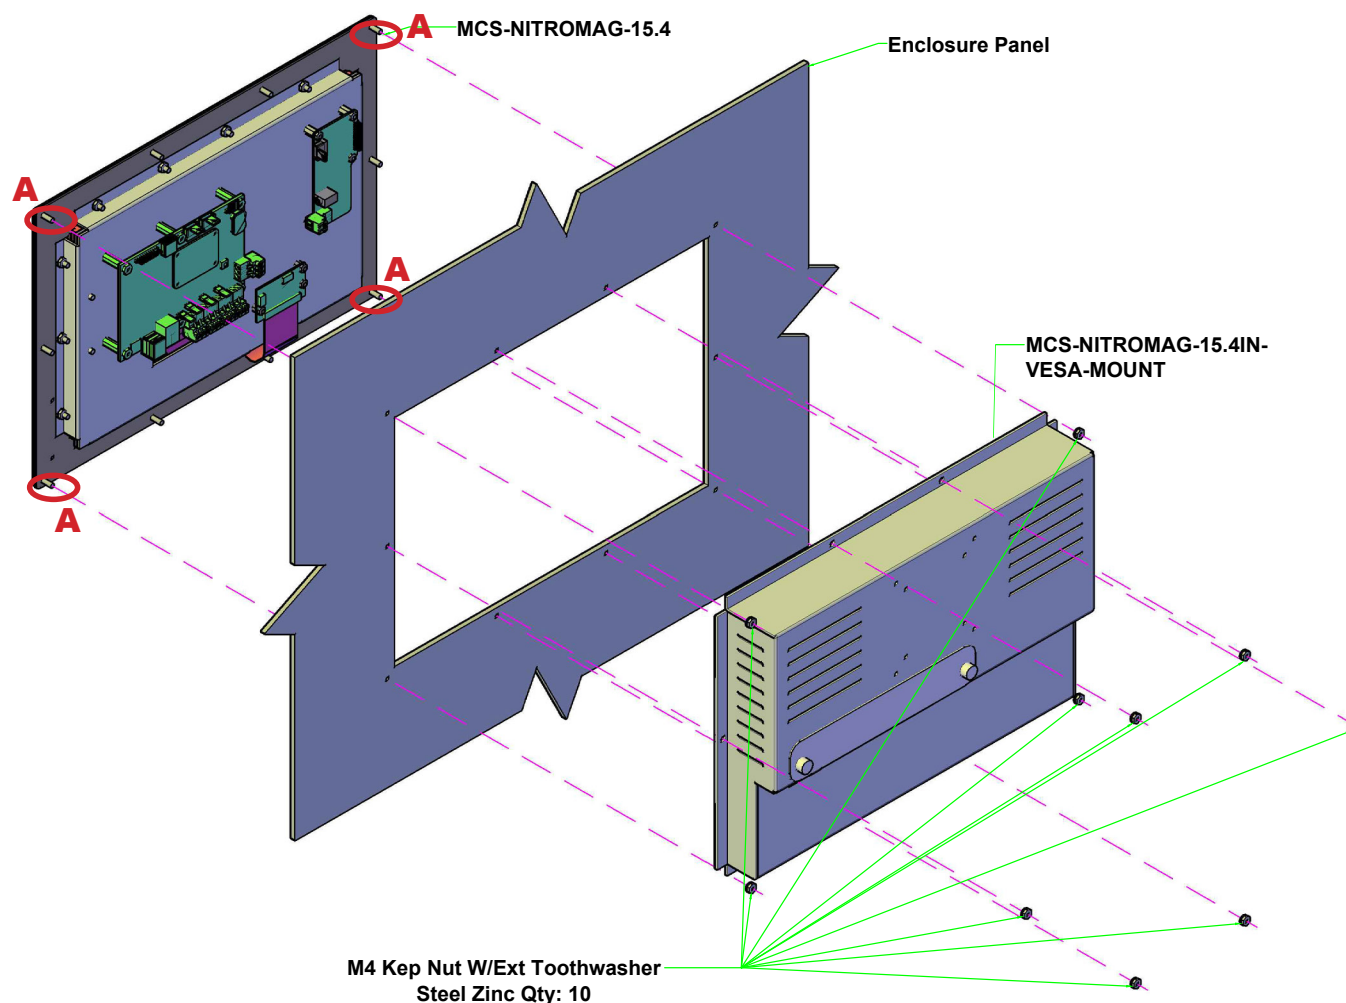

1. Remove all nuts from back of the touchscreen (10).
2. Separate the face of the touchscreen from the Vesa Mount back.
3. **Lay the template (printed sheet supplied) on your enclosure**, mark area for the cutout, 15.75 x 10.875 (40.05 x 27.6225cm).
4. Mark the 10 holes to drill.
5. Drill bit size - 3/16in (5mm).
6. Cut out the hole for the touchscreen.
7. Place the Touchscreen Face Plate through the cutout and secure the **"4" corner 'A' nuts** to the enclosure.
8. Place the Vesa-Mount back onto the face plate studs, secure the remaining 8 nuts, making sure you do not over tighten the nuts. Tightening each nut around the frame, so the gasket is not pinched. **Torque value 1 lbf.in**






# MCS-NITROMAG-15.4

## Customer Installation Wiring

### Wiring Diagram

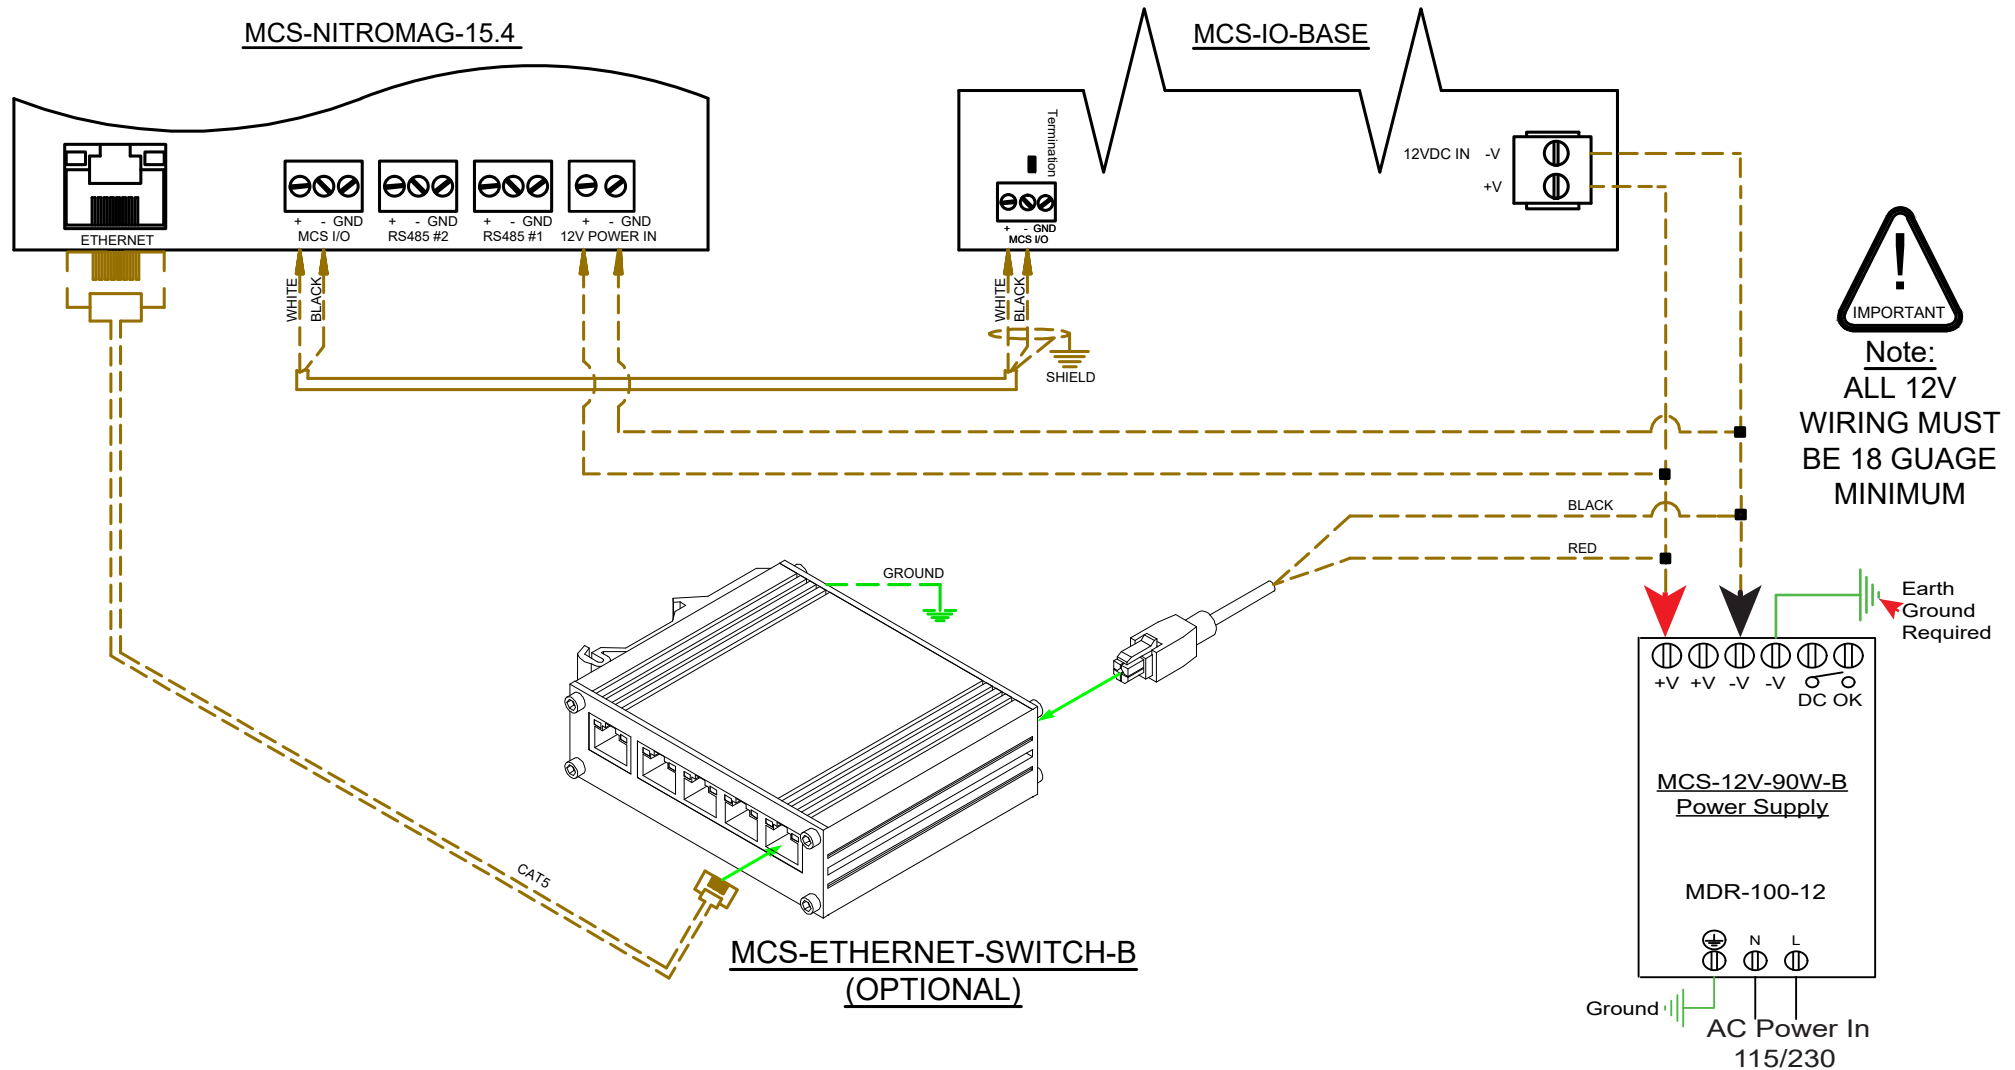

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA  
Office: 239-694-0089 - Fax: 239-694-0031  
[www.mcxcontrols.com](http://www.mcxcontrols.com) - [support@mcxcontrols.com](mailto:support@mcxcontrols.com)